

# SpyderTV PRO 2007

## QUICK START GUIDE

### CONTENTS

- ❖ Datacolor SpyderTV™ Platinum Colorimeter
- ❖ SpyderTV PRO™ 2007 software CD
- ❖ Spyder2 PRO™ software CD
- ❖ SpyderTV PRO™ 2007 test pattern DVD - PAL
- ❖ SpyderTV PRO™ 2007 test pattern DVD - NTSC
- ❖ RS-232 cable
- ❖ Null Modem Adapter
- ❖ Dongle
- ❖ Keyspan USB Serial Adaptor (Only used for DirectConnect devices)
- ❖ SpyderTV PRO™ Tripod mount
- ❖ SpyderTV PRO™ Quick Start Guide
- ❖ SpyderTV PRO™ vs. Spyder2 PRO™ comparison sheet
- ❖ Aluminum Carrying Case (15"x10.75"x4.5")
- ❖ SpyderTV Warranty Card
- ❖ Free Technical Support
- ❖ Free Auto Software Updates
- ❖ Access to Training Website

- SpyderTV PRO™ System Requirements**
- ❖ DVD player
  - ❖ Remote control
  - ❖ Desktop or laptop PC nearby the TV with Windows® 2000 or XP operating system and a USB port.



**datacolor**  
Because Color Matters

## STEP 3

PLACE THE SpyderTV PRO COLORIMETER ON YOUR SCREEN

There are 2 ways to place the SpyderTV PRO colorimeter on your screen:



a. Suction cup



b. Tripod

## STEP 4

SET UP TO OPTIMIZE YOUR DISPLAY



Insert the USB connection of the SpyderTV PRO colorimeter into the USB port on your computer.



Click on the SpyderTV PRO icon on your Desktop to launch the SpyderTV PRO software.

## STEP 1

BEFORE YOU START



Ensure that all necessary hardware is available (desktop or laptop PC nearby, DVD player, remote control for your DVD and for your display)



Insert your Test Pattern and Instructions DVD and select the **How to Use SpyderTV PRO** menu item to learn how to optimize your TV.

## STEP 3a

USING SUCTION CUP TO PLACE THE SpyderTV PRO COLORIMETER ON YOUR SCREEN



Slide the suction cup down the wire so that it is on the SpyderTV PRO leg.



Attach the suction cup to the TV so that the SpyderTV PRO is in the center of the screen.


**WARNING:** Do not press the suction cup down too hard. Be sure to use the release tab when removing the suction cup.

## STEP 5

OPTIMIZE YOUR DISPLAY



The wizard driven software will lead you through the steps to complete your color calibration. There is a rich "help" section if you require a more in-depth explanation of each step.

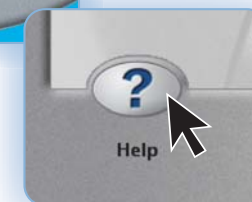

## STEP 2

INSTALL YOUR SOFTWARE



Install your SpyderTV PRO software following on-screen instructions.

**NOTE:** Do not plug in your USB dongle until the software is fully installed and you are prompted to do so.

## STEP 3b

USING A TRIPOD TO PLACE THE SpyderTV PRO COLORIMETER ON YOUR SCREEN

*Tripod not included.*



Snap the suction cup onto the SpyderTV PRO. Then, screw the device to the tripod mount.



Attach to any standard tripod. Place the tripod with the SpyderTV PRO against the TV. Tilt and adjust the tripod so your SpyderTV PRO touches the TV in the middle and is perfectly flush.

## STEP 6

CHECK BEFORE AND AFTER IMAGES



From the Main Menu of the DVD, select **Before & After Images** to see the improvement in your picture.

**CONGRATULATIONS, YOU'RE DONE!**

For customer support, call 800-554-8688.

Visit [spydervpro.com](http://spydervpro.com) to get Free Training, certification, forums, monthly topics, useful links and expert tips.